

BP-8LF Series

High Sensitivity Back Pressure Regulators

Introduction

The BP-8LF Series back pressure regulator is designed to furnish precise low back pressure control in analytical instrumentation. With the combination of the large diaphragm sensing area of the BP-8 Series Regulator and the low flow seat assembly of the BP-3 Series pressure regulator, pressure control down to 10 inches of water is easily obtainable.



Typical Applications

- Analytical instrumentation
- Gas and liquid sampling
- Research labs

Technical Data

CONSTRUCTION	316L stainless steel (standard) Monel® or Hastelloy® C-276 (optional)		
ADJUSTABLE STANDARD PRESSURE RANGES	0–6, 0–25, 0–50, 0–75, 0–125, 0–250 & 0–500 psig		
OPERATINGTEMPERATURE	-40° F to +500° F (-40° C to +260° C)		
C _V COEFFICIENT	0.2 (standard) 0.03, 0.05, 0.06, 0.12, 0.24, 0.3, 0.095, 0.025, 0.04, 0.005, 0.01 (optional)		
INLET & OUTLET CONNECTIONS	¼″ FNPT		

Features & Benefits

- Sensitive pressure control
- Low pressure adjustability
- Standard PTFE / Viton[®] diaphragm

Options

PTFE / stainless steel diaphragm

GO Regulator

405 Centura Court • PO Box 4866 (29305) • Spartanburg, SC 29303 Phone (864) 574-7966 Fax (864) 574-5608 www.goreg.com • sales@goreg.com

High Sensitivity Back Pressure Regulators


SEAT MATERIAL	MAXIMUM TEMPERATURE	@	MAXIMUM CONTROL RANGE		
Viton®	250° F (121° C)	@	500 psig (5.16 MPa)		
Kalrez®	300° F (148° C)	@	500 psig (5.16 MPa)		
High density PTFE	200° F (93° C)	@	500 psig (5.16 MPa)		
Polyimide	500° F (260° C)	@	500 psig (5.16 MPa)		

Maximum Temperature and Control Pressures

Temperatures in excess of 175° F (80° C) require the use of a T-handle or the tamper proof option.

How to Order

For additional configurations, consult the factory. Standard items in bold.

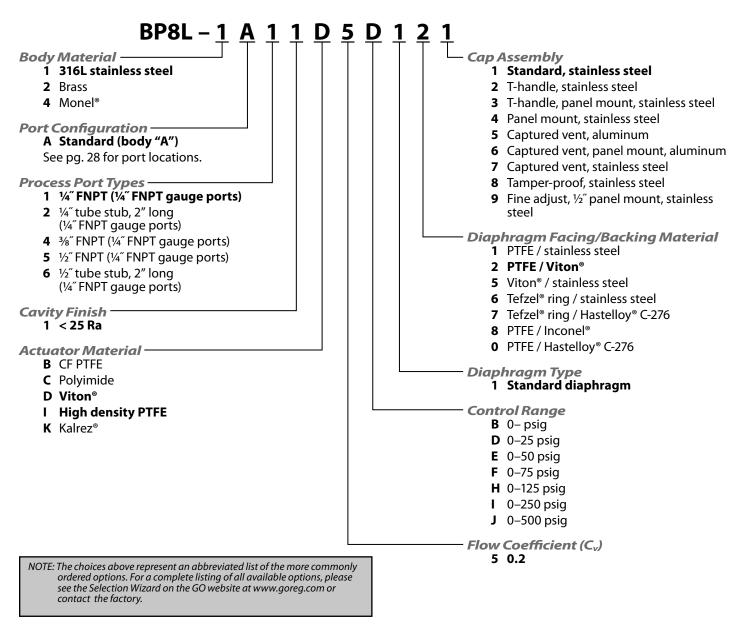

For flow curve charts, visit http://www.goreg.com.

High Sensitivity Back Pressure Regulators

Outline and Mounting Dimensions

